


Generic AEC/FM View Description

Architectural design to quantity take-off - level 1

Reference	VBL-004	Version	1	Status	Draft
History	Based on BLIS view 'Arch. design >> Quantities take off / cost estimating' (2000) Based on SABLE DAPI 'Quantity Information for Cost Estimation' (2004) Generic architectural design to quantity take-off document created 20.10.2006 Divided into 3 levels 18.3.2007				
Authors	Jiri Hietanen				
Document Owner	Virtual Building Laboratory @ TUT (jiri.hietanen@tut.fi)				

Description

This view defines the subset of the data created in architectural design software, which is useful for quantity take-off purposes.

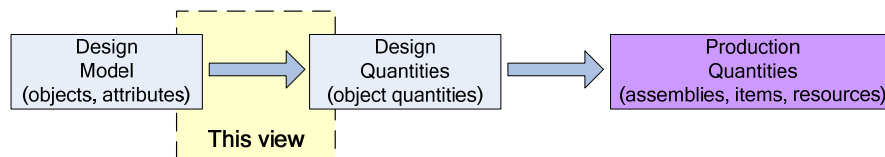

The basic idea behind this view is that architects (and other designers) provide design object quantities (e.g. gross area of a wall), which can be used as 'raw material' for creating production quantities (e.g. material, labor, equipment etc. involved in building a wall). Designers think in terms of spaces, building elements and their functional properties. Quantity take-off focuses on assemblies, items and the resources required for these assemblies and items.

In scope for this view are:

- Spaces
- Surface elements
- Building elements
- Furniture and fixtures

For each of these the following data is needed

- Identification → used for grouping design objects in a way that is meaningful to quantity take-off
- Quantity → used as 'raw material' for production quantities
- Location → used for organizing the production quantities

For identification this view relies on type information, such as the construction type and space type. In the exchange type information may be reduced to simple string attributes.

This view (level 1) does not explicitly define any quantities. It defines the objects exchanged between an architectural BIM modeling application and a geometry aware BIM application. The idea is that the receiving application creates internal objects based on the exchanged information, and these internal objects expose the quantities used in quantity take-off. This view defines for example the geometry of a wall and opening, and their relationship in such a way that the combination can be fully re-created in the receiving application. The receiving application can expose the gross and net areas of the wall to quantity take-off.

Location information is included whenever it is defined by the architect. However, it is acknowledged that the architect may not provide all location information needed by quantity takeoff, e.g. construction sections.

Out of scope for this view are cost information, scheduling information and production information (assemblies, items and resources). Out of scope are libraries of construction types and space types.

This document uses the official IFC Model View Definition Format version 1.1.0. of the IAI (www.iai-international.org)
The content of this document has to be certified by the IAI before becoming part of an official IFC Model View Definition.